


AMC X0i

4 Zone 4 Local/4 Remote Source
A/V Matrix Digital H.O.M.E. System

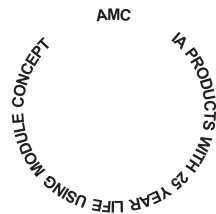

INSTRUCTIONS FOR INSTALLATION AND OPERATION



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



AFIN DEVIÉTER UN CHOC ELECTRIQUE ET LES CONSEQUENCES GRAVES QUI POURRAIENT EN RESULTER, TENÉTEZ PAS D'OUVRIR L'APPAREIL ET DE TOUCHER AUX COMPOSANTS INTERNES SANS LA PRESENCE D'UNE PERSONNE QUALIFIEE.



PARA REDUCIR EL RIESGO DE SACUDIDAS ELECTRICAS, NO DEBERA QUITARSE LA TAPA (NI PARTE POSTERIOR). CONSULTESE AL PERSONAL CAPACITADO PARA LAS REPARACIONES INTERNAS.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
ADVERTENCIA: PARA EVITAR EL RIESGO DE INCENDIO O SACUDIDA ELECTRICA, NO DEBERA EXPONERSE ESTE APARATO A LA LLUVIA O HUMEDAD.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARISED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE..

ATTENTION: POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR. UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SILES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

PRECAUCION: PARA EVITAR SACUDIDAS ELECTRICAS, NO DEBERA UTILIZARSE ESTA CLAVIJA POLARIZADA CON UN CORDON DE PROLONGACION, RECEPTACULO U OTRO TIPO DE SALIDA A MENOS QUE SE HAYAN INSERTASO COMPLETAMENTE LAS LENGÜETAS PARA EVITAR SU EXPOSICION.

NOTE: Some AMC products are equipped with dual or multi-voltage transformers (which is indicated on the back panel). If you wish to change the voltage, please bring your unit to an authorised AMC service technician for internal conversion.

ATTENTION: Quelques pièces AMC sont munies de transformateurs à double ou à multi-voltage (indiqué au panneau arrière). Si vous voulez changer le voltage, veuillez apporter votre appareil au fournisseur de AMC pour le transformer.

ZUR BEACHTUNG: Einige AMC Geräte sind mit Umschaltern für unterschiedliche Netzspannungen ausgerüstet (Ein Vermerk auf der Rückseite weist darauf hin).

Die Anpassung, wenn notwendig, muß von einem qualifizieren Techniker in einer AMC Servicestation vorgenommen werden.

NOTA: Ciertos componentes de AMC están dotados de transformadores de doble tensión o de varias tensiones (lo que se indica en el panel posterior). Si se desea cambiar la tensión, sírvanse llevar el aparato a un técnico autorizado por AMC para su conversión interna.

NOTE TO CATV systems installer: This reminder is provided to call the CATV system installer's attention to Article 820-22 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTA PARA EL INSTALADOR DE ANTENAS DE TELEVISION COLECTIVAS: La presente advertencia se provee para llamar la atención del instalador al Artículo 820-22 de NEC (Código Eléctrico Nacional) donde se facilitan las directrices para la pertinente puesta a tierra y que especifica en particular que el conductor a tierra del cable debe conectarse al sistema de conexión a tierra del edificio, lo más proximo posible al punto de entrada del cable.



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user of the presence of un-insulated "dangerous voltage" within the product's enclosure; that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.


APPLICATION AND FEATURE LIST

Features of the AMC_{TM} model XOi

- * System for total 4 Zones
- * System with 8 Sources 4 Local / 4 Remote mixed Sources.
- * Only RJ45 & Speaker Wires used for installations from XOi main unit to all zones
- * Two ways AMC proprietary Digital Data Communication System between XOi main unit and keypads in all zones
- * Volume Control & Tone Control for each Zone
- * Four 38KHz and four 56KHz IR outputs on rear panel of XOi main unit
- * Doorbell and telephone mute system (PDM1) - option
- * With RS232 to digital link with other systems - option
- * IR remote control receiver on each zone for controlling XOi main unit and remote Sources in other zones
- * RCA, 3.5mm mini jack and RJ45 Remote Source input jacks in each Zone
- * Low profile 1U
- * Power of each channel / zone : 15W x 2 Digital Amplifiers for each Zone.
- * The XOi package contains:
 - 1 XOi main unit
 - 2 Rack ears
 - 4 IRE1 IR emitters with feedback LED
 - 1 This Manual
 - 1 Zone description labels
- * Options : XK1, XS1, PDM1 (numbers of XK1, XS1, PDM1 required based on each installation designs)


REAR PANEL CONNECTIONS/FRONT PANEL CONTROLS - 1

With XK1

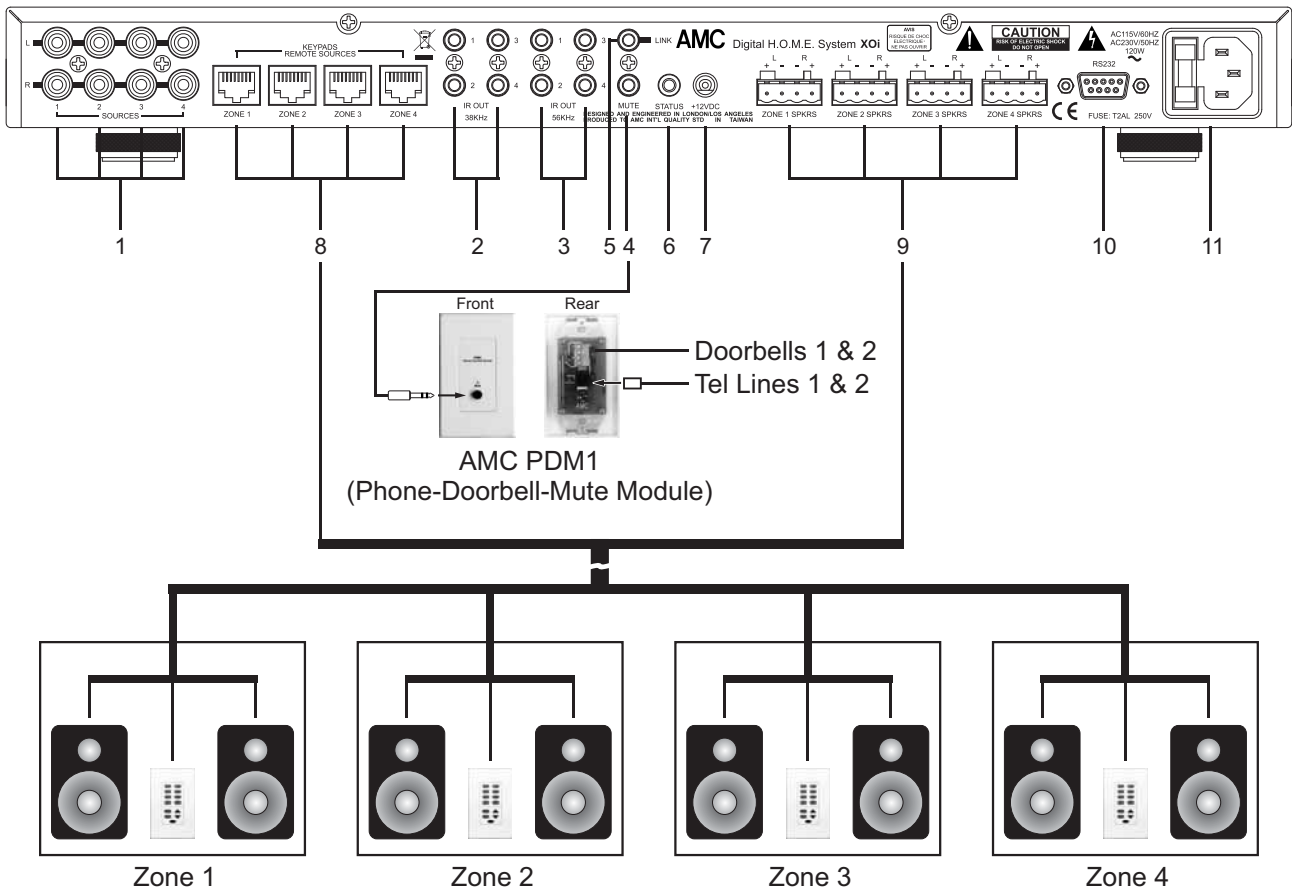

- | | |
|----------------------------|-----------------------------------|
| 1. Local Source Inputs 1~4 | 7. 12VDC |
| 2. IR Out - 38KHz | 8. Keypads & Remote Sources |
| 3. IR Out - 56KHz | 9. Speaker Terminals |
| 4. Mute | 10. RS232 |
| 5. Link | 11. AC input receptacle with Fuse |
| 6. Status | |


FRONT PANEL

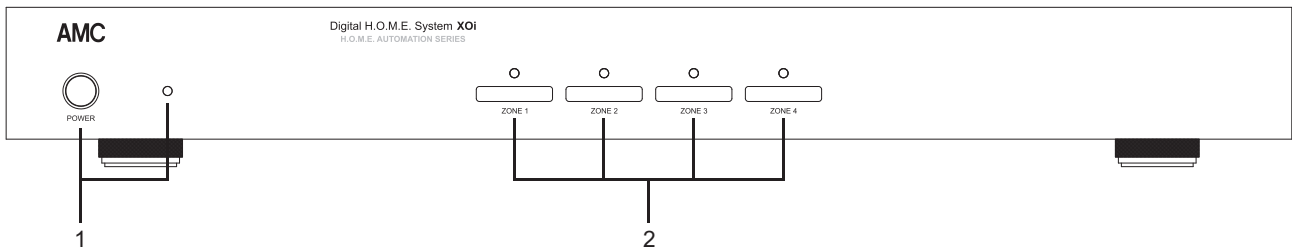

- | | |
|--|---------------------------------|
| 1. Power Switch (Standby / Off) & Blue LED | 2. Zone LED & 4 square Recesses |
|--|---------------------------------|


REAR PANEL CONNECTIONS/FRONT PANEL CONTROLS - 2

With XK1 & XS1bt (Can be without XK1 if There is other Controller)

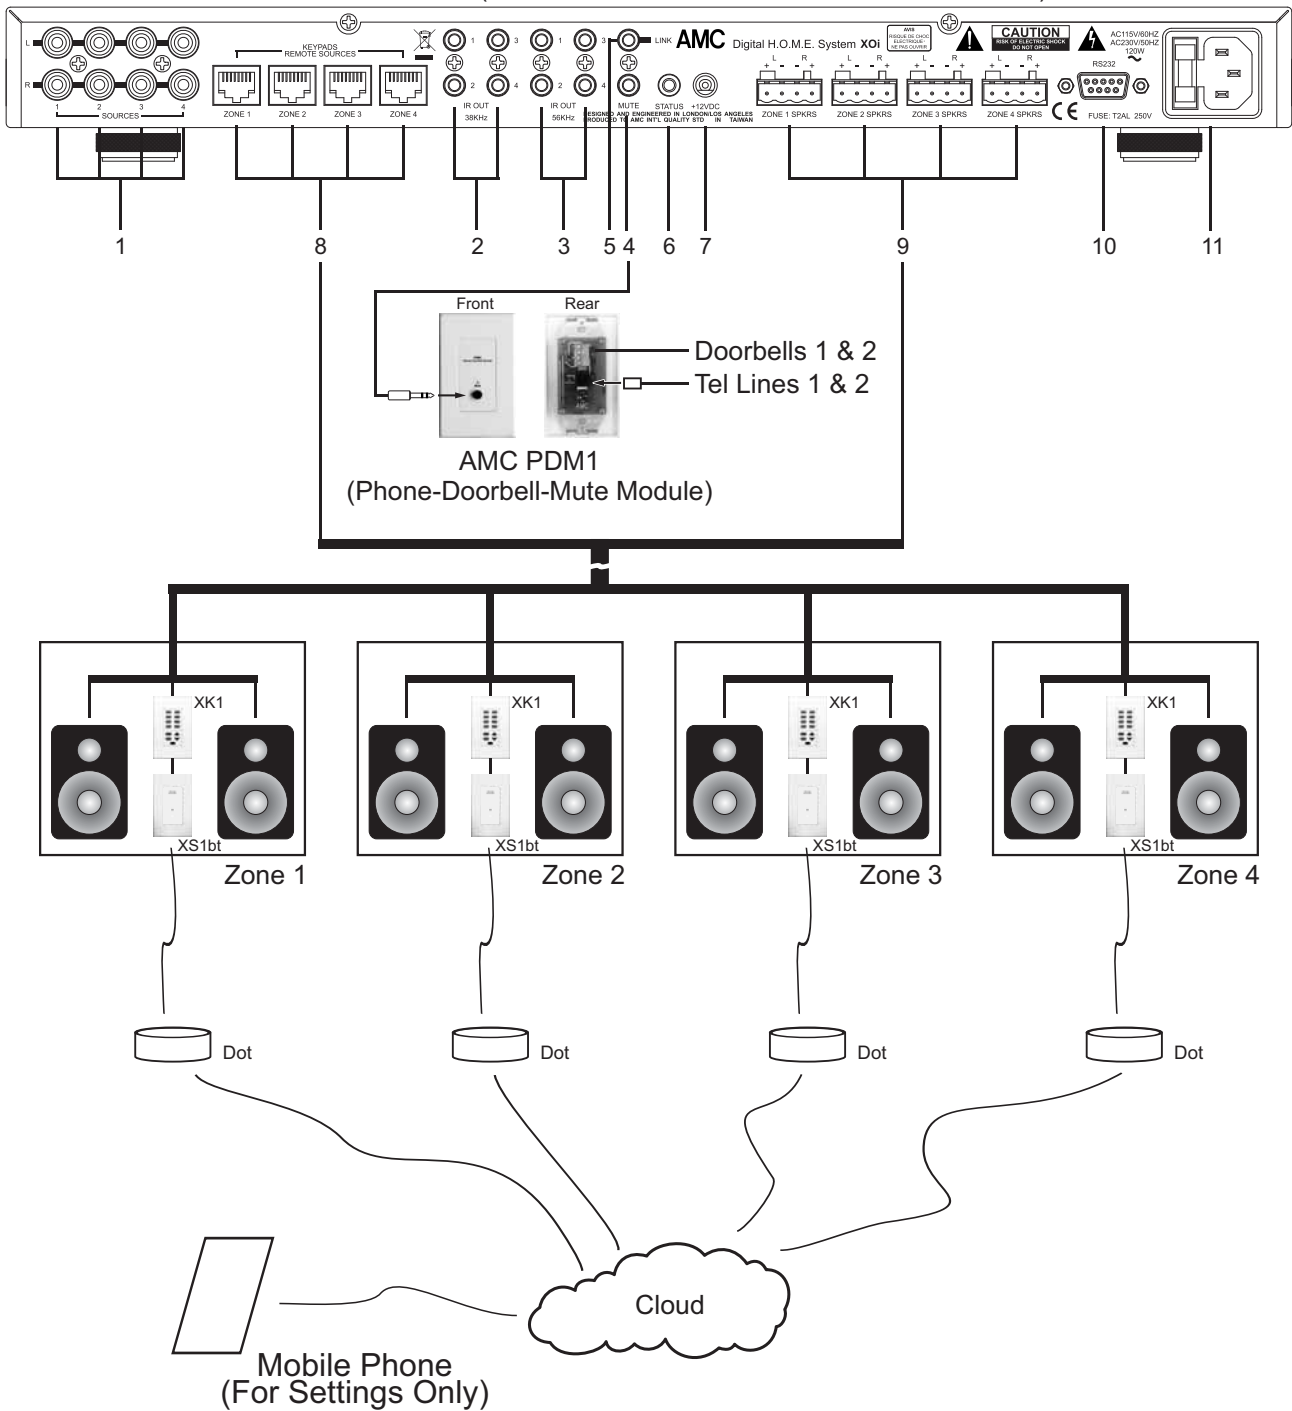


REAR PANEL CONNECTIONS/FRONT PANEL CONTROLS - 3

With XK1 & AB01 (Can be without XK1 if There is other Controller)

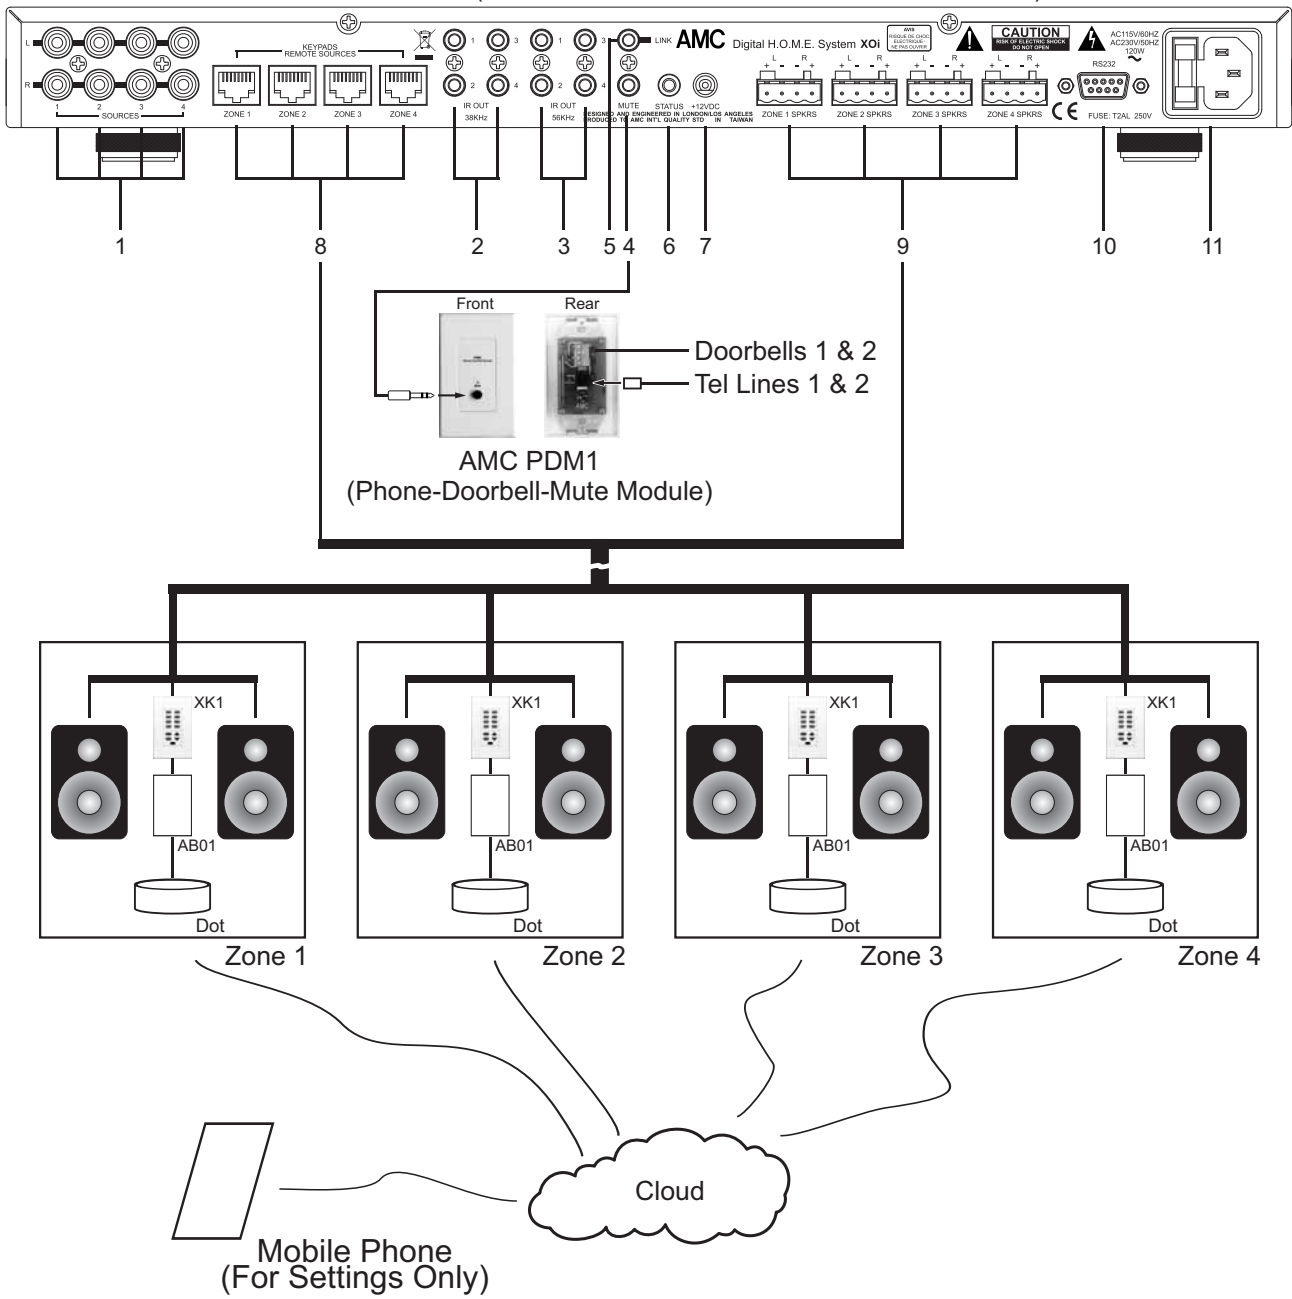

REAR PANEL CONNECTIONS/FRONT PANEL CONTROLS - 4

With XK1 & XS1 (Can be without XK1 if There is other Controller)

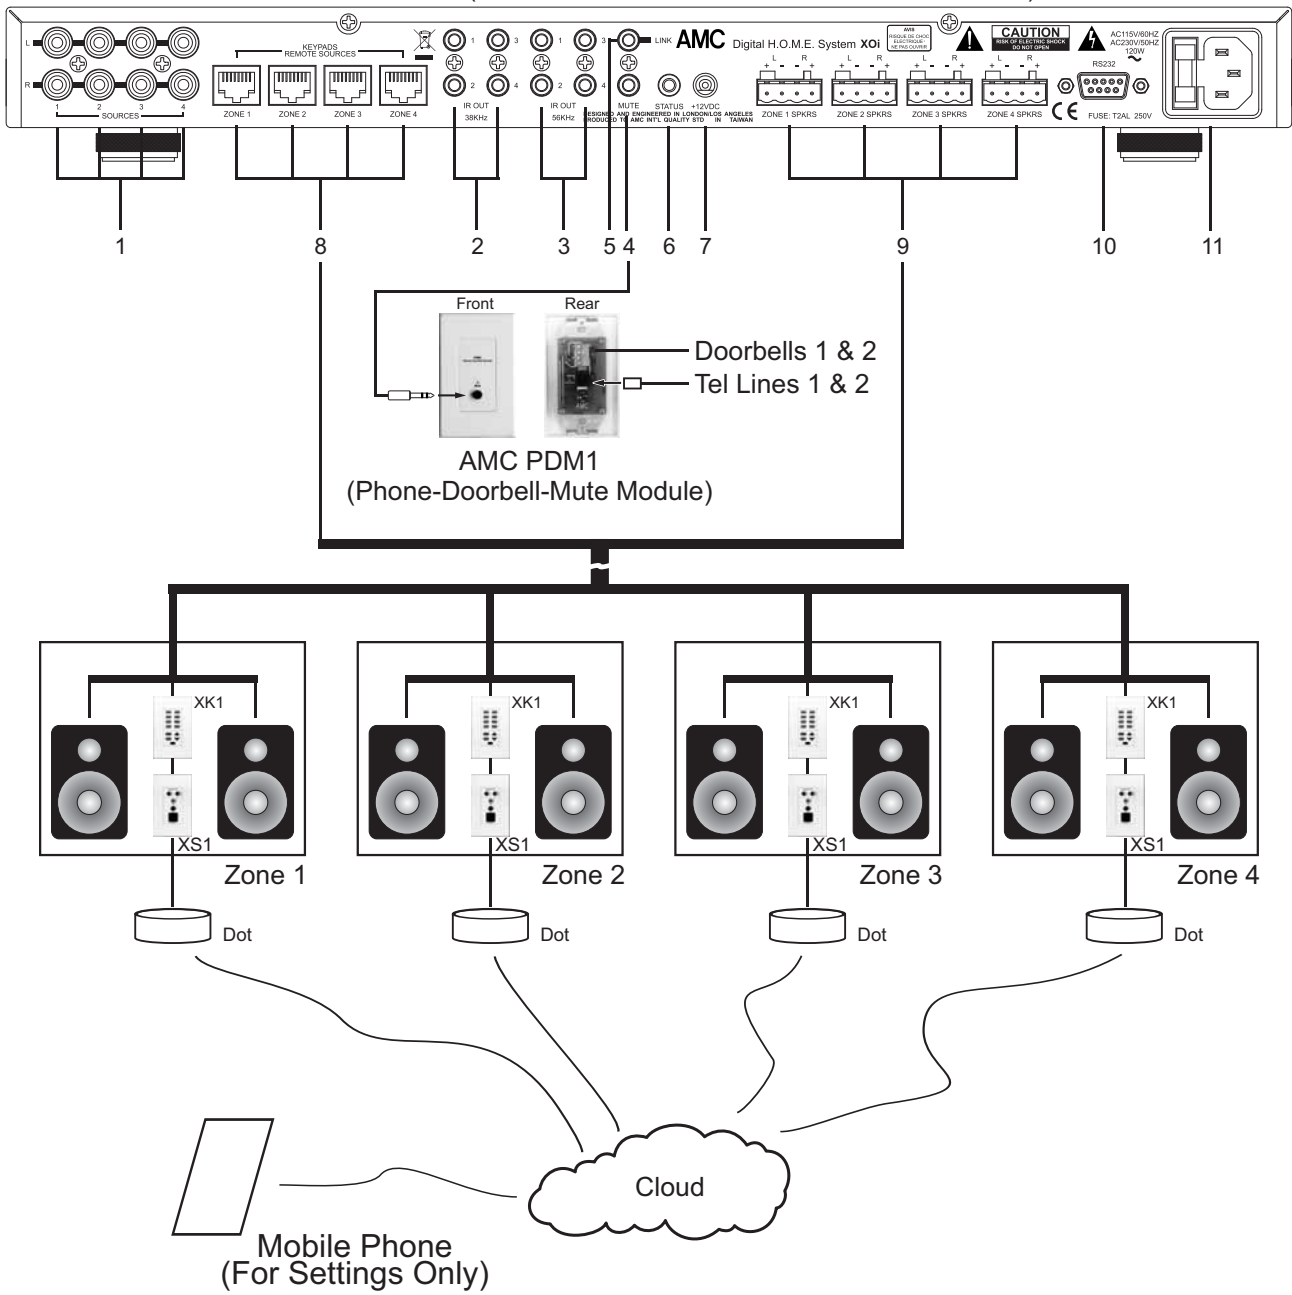

REAR PANEL CONNECTIONS

1. Local Source Inputs 1~4

Each of these stereo RCA inputs receives an audio signal from up to four independent audio sources.

Remarks: There are other 4 Remote sources from Zone 1~4 as Remote Source Inputs R5 to R8 can be selected by all zones.

Remote Source R5 is located at XS1 of Zone 1, Remote Source R6 is located at XS1 of Zone 2, Remote Source R7 is located at XS1 of Zone 3 and Remote Source R8 is located at XS1 of Zone 4. Signals of R5 are mixed with signals of Local Source 1, Signals of R6 are mixed with signals of Local Source 2, Signals of R7 are mixed with signals of Local Source 3 and Signals of R8 are mixed with signals of Local Source 4. Users can connect Source unit to one of the two mixed source inputs or connect two Source units to both Local and Remote Source Inputs. When users connect two Source units to both Local and Remote Source Inputs, users can play each source separately or play both sources at the same time with signals of the two sources mixed together.

2. IR Out - 38KHz

For most Audio Sources

3. IR Out - 56KHz

For cable and satellite boxes.

Note:

All IR Outs are 5Vp-p. It is sufficient to drive single emitters, but would be marginal with dual (series connected) emitters.

4. Mute

This 3.5mm non-shorting Stereo connector (Power, Mute, Gnd) is designed to be used in conjunction with the AMC PDM1 (Phone-Doorbell-Mute Module) - This is an option feature.

5. Link

This 3.5mm mono connection is used to expand the AMC XO_i from four to eight zones. - This is an option feature.

6. Status

This jack goes high with any zone ON and goes low when the last zone is turned OFF.

This is rather light current output and may not trip some external trigger inputs.

7. 12VDC

For supplying 12VDC to external modules. (total 500mA max)

8. Keypads & Remote Sources

9. Speaker Terminals

10. RS232

This is used for making interface with other system and for factory purposes. - This is an option feature.

FRONT PANEL CONTROLS

1. Power Switch (Standby / Off) & Blue LED

The Power Switch turns AMC XO_i "Standby" or "Off"


The Blue LED will be lit up during "Standby", will be turned off during "Off"

2. Zone LED & 4 square Recesses

Each of these LEDs indicates, when lit, that its zone keypads are turned on.

The 4 square recesses are for putting labels of names of all zones

KEYPAD (XK1 for Zone 1 to 4)

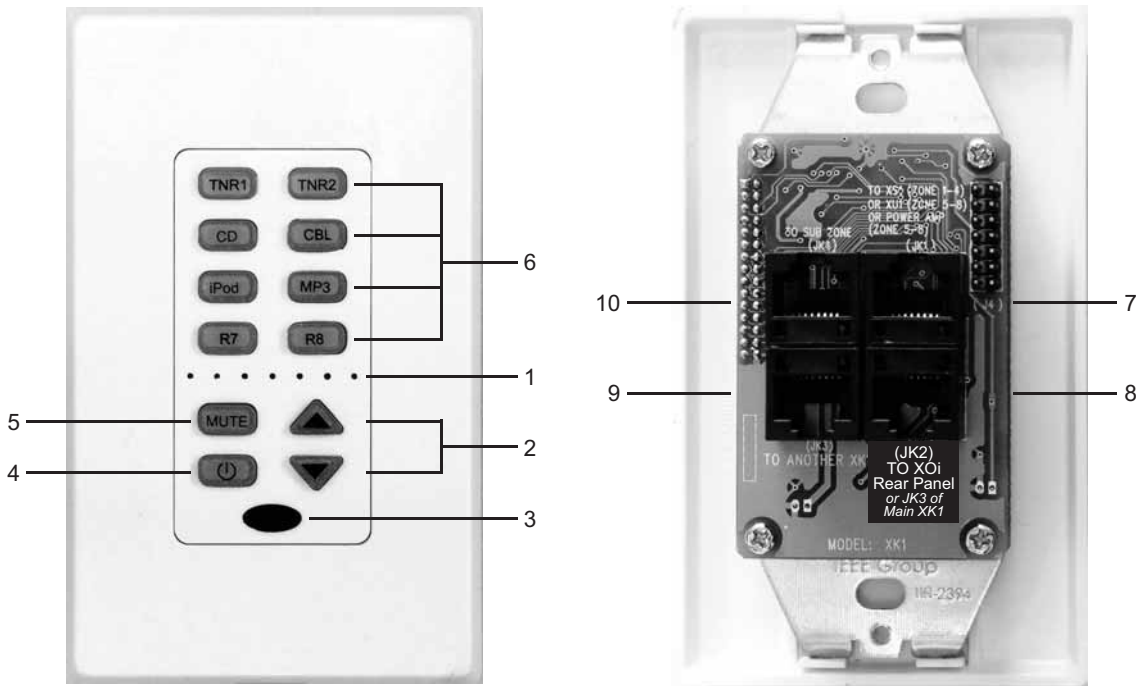

1. LED's of Volume Level of the zone
Volume-only one LED will be lighted up. (for energy saving purposes)

2. Volume up ▲ / down ▼

3. IR Receiver

Each keypad has an IR receiver for controlling the Local and Remote source equipments.

4. Power

The power button turns the keypad's zone on and off independently.

5. Mute

The mute button temporarily mutes any audio playing in that keypad's zone.

6. Source Selection

The 8 source buttons independently select any of the four local sources (Source 1 to 4) connected to the rear

panel of AMC XO i main unit and four Remote Sources (Source R5 to R8) connected to the XS1 of Zone 1 to 4. (R5 located at Zone 1, R6 located at Zone 2, R7 located at Zone 3 and R8 located at Zone 4) The selected source button will remain lit.

When Remote Source is selected, it is mixed with the signal of Local Source.

7. JK1 (RJ45) (to XS1) (Zone 1~4) or XU1 (Zone 5~8) or Power Amp (Zone 5~8)

For Zone 1~4, please use Cat-5 cable to connect from the JK1 of XK1 to the RJ45 connector on the rear side of XS1 for hooking to Remote Sources R5 (located at Zone 1), R6 (located at Zone 2), R7 (located at Zone 3) and R8 (located at Zone 4).

8. JK2 (RJ45) (TO XOi Rear Panel)

Use Cat-5 cable to connect from the JK2 of XK1 to RJ45 of specific Zone on XOi Rear Panel (or JK3 of Main XK1 - option)

9. JK3 (RJ45) (To Another XK1)


Use Cat-5 cable to connect from the

JK3 of XK1 to JK2 of Another XK1. - This is an option feature.


10. JK4 (RJ45) (To SUB ZONE)

Use Cat-5 cable to connect from the JK4 of XK1 to main-in of amplifiers or power speakers. - This is an option feature.

REMOTE SOURCE XS1 (for Zone 1 to 4)

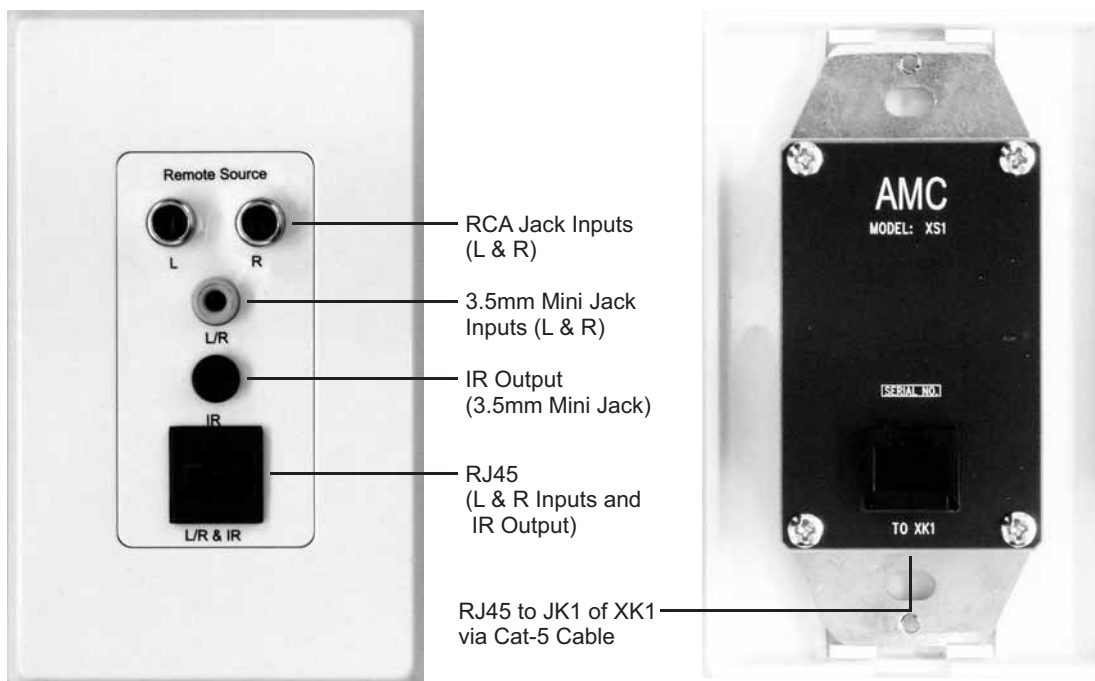

REMOTE Bluetooth XS1bt (for Zone 1 to 4) Bluetooth Receiver (ID: AMC-BT)

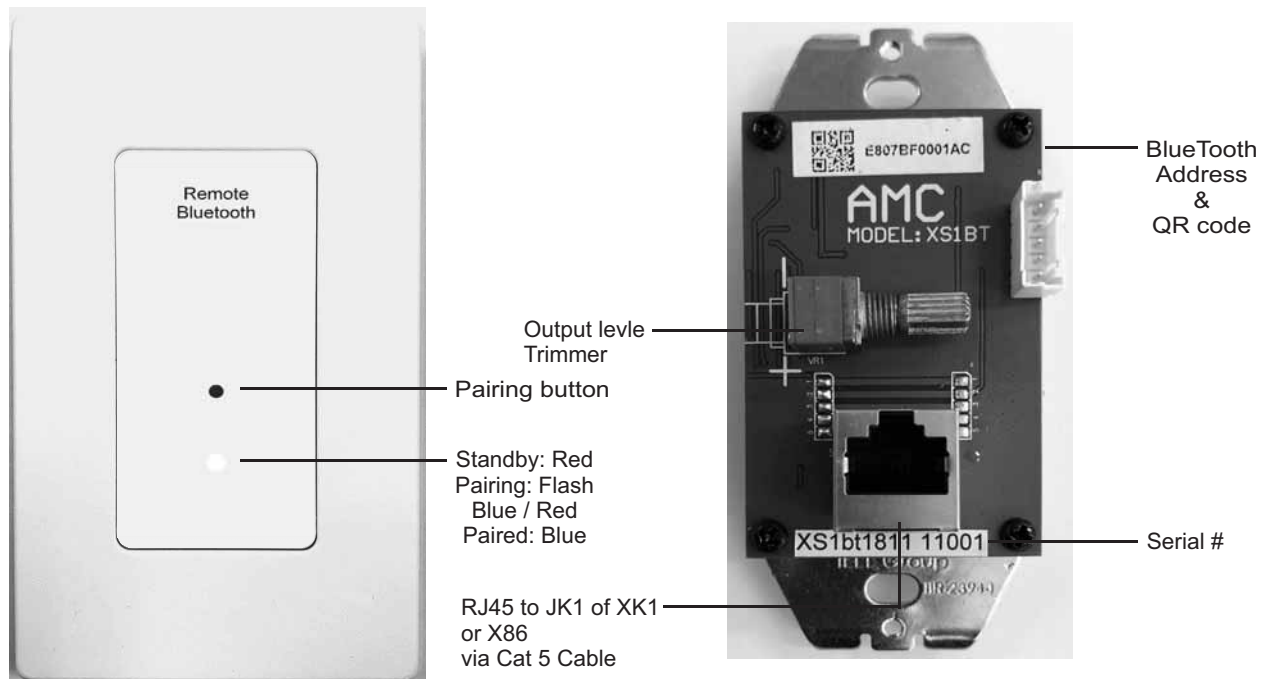

Operations of Pairing button:

instant Press button: round dot under switch turns “Red” indicating “standby”

Press button for 3 sec: Pairing Mode, Flash Blue / Red

Paired: Blue

Press button for 3 sec → Blue / Red Flash → Press button for 5 sec again → Turned off

*Remarks:

After power outage, turn on Dot and set to play music, then instant press button, round dot will turn red and then turn to blue and back to normal operation status.

Output level Trimmer: Counter Clockwise position is maximum output, use the trimmer to set output level matching other sources

Use Amazon Alexa App to link Dot to Remote Bluetooth

- Select Amazon Alexa APP
- Touch 3 line icon on left upper corner on the page and select “Settings”
- Select Device or Set up a new device
- Select “Bluetooth” & set Remote Bluetooth XS1bt to pairing mode
- Select “Pair a new device”
- Wait until “AMC-BT” displayed (may take serval minutes depending on Mobile phone)
- Select “AMC-BT” and you will hear “Now connected to AMC-BT” from Speaker

Remarks:

- If for some reasons DOT responding with “Can not find AMC-BT”, please “Forget Device” the Pre-selected “AMC-BT” and then “PAIR A NEW DEVICE” again to connect to “AMC-BT”. Then the System will be connected together.

IR Remote Control Codes

Subject: AMC I/R Codes													
Customer Code: 07E8 (For RC-168)													
Hex	Key	Function	D0	D1	D2	D3	D4	D5	D6	D7	Type	Product(s)	
80	K1		0	0	0	0	0	0	0	1			
81	K2		1	0	0	0	0	0	0	1			
82	K3	MuteOn/Off	0	1	0	0	0	0	0	1	General	RC-168	
83	K4	Mute On	1	1	0	0	0	0	0	1	General	RC-168	
84	K5	Mute Off	0	0	1	0	0	0	0	1	General	RC-168	
85	K6		1	0	1	0	0	0	0	1			
86	K7		0	1	1	0	0	0	0	1			
87	K8		1	1	1	0	0	0	0	1			
88	K9		0	0	0	1	0	0	0	1			
89	K10		1	0	0	1	0	0	0	1			
8A	K11		0	1	0	1	0	0	0	1			
8B	K12		1	1	0	1	0	0	0	1			
8C	K13		0	0	1	1	0	0	0	1			
8D	K14		1	0	1	1	0	0	0	1			
8E	K15		0	1	1	1	0	0	0	1			
8F	K16		1	1	1	1	0	0	0	1			
90	K17		0	0	0	0	1	0	0	1			
91	K18		1	0	0	0	1	0	0	1			
92	K19		0	1	0	0	1	0	0	1			
93	K20		1	1	0	0	1	0	0	1			
94	K21	AC Outlet	0	0	1	0	1	0	0	1	General	RC-168	
95	K22	Outlet On	1	0	1	0	1	0	0	1	General	RC-168	
96	K23	Outlet Off	0	1	1	0	1	0	0	1	General	RC-168	
97	K24	Power On/Off	1	1	1	0	1	0	0	1	General	RC-168	
98	K25		0	0	0	1	1	0	0	1			
99	K26		1	0	0	1	1	0	0	1			
9A	K27		0	1	0	1	1	0	0	1			
9B	K28		1	1	0	1	1	0	0	1			
9C	K29		0	0	1	1	1	0	0	1			
9D	K30		1	0	1	1	1	0	0	1			
9E	K31		0	1	1	1	1	0	0	1			
9F	K32		1	1	1	1	1	0	0	1			
C0	K33	#2	0	0	0	0	0	0	1	1	Input	RC-168	
C1	K34	#1	1	0	0	0	0	0	1	1	Input	RC-168	
C2	K35	#3	0	1	0	0	0	0	1	1	Input		
C3	K36	#4	0	0	1	0	0	0	1	1	Input	RC-168	
C4	K37	#5	0	0	0	1	0	0	1	1	Input	RC-168	
C5	K38	#6	1	0	1	0	0	0	1	1	Input	RC-168	
C6	K39	#7	0	1	1	0	0	0	1	1	Input	RC-168	
C7	K40		1	1	1	0	0	0	1	1			
C8	K41	#8	0	0	0	1	0	0	1	1	Input	RC-168	
C9	K42		1	0	0	1	0	0	1	1			
CA	K43		0	1	0	1	0	0	1	1			
CB	K44		1	1	0	1	0	0	1	1			
CC	K45		0	0	1	1	0	0	1	1			
CD	K46		1	0	1	1	0	0	1	1			
CE	K47		0	1	1	1	0	0	1	1			
CF	K48		1	1	1	1	0	0	1	1			
D0	K49		0	0	0	0	1	0	1	1			
D1	K50		1	0	0	0	1	0	1	1			
D2	K51		0	1	0	0	1	0	1	1			
D3	K52		1	1	0	0	1	0	1	1			
D4	K53		0	0	1	0	1	0	1	1			
D5	K54		1	0	1	0	1	0	1	1			
D6	K55		0	1	1	0	1	0	1	1			
D7	K56		1	1	1	0	1	0	1	1			
D8	K57	Master Volume Up	0	0	0	1	1	0	1	1	General	RC-168	
D9	K58	Master Volume Dn	1	0	0	1	1	0	1	1	General	RC-168	
DA	K59	AC Outlet On/Off	0	1	0	1	1	0	1	1	General	RC-168	
DB	K60	Power OFF	1	1	0	1	1	0	1	1	General	RC-168	
DC	K61	Power ON	0	0	1	1	1	0	1	1	General	RC-168	
DD	K62		1	0	1	1	1	0	1	1			
DE	K63		0	1	1	1	1	0	1	1			
DF	K64		1	1	1	1	1	0	1	1			

INSTALLING THE XO_i DIGITAL HOME SYSTEM

1. Prewire

The XO_i uses Cat-5 cable for keypad control and either two- or four-conductor 16-gauge speaker wire. All the wire is □homerun□ from each zone to the XO_i.

2. The XO_i digital home systems require Cat-5, unshielded, twisted pair (UTP), for communication between the keypads/display pads and the main XO_i unit. Each end of the wire is terminated with an RJ45 connector.

The XO_i system can accommodate 500 total feet of Cat-5 cable for each zone. For the most reliable operation, it is best that no single run of Cat-5 exceeds 250 feet.

The correct wiring scheme for the Cat-5 cable is standard EIA/TIA 568A. Properly terminating the Cat-5 cable is crucial for the operation of the system. It is very important to use a good quality crimp tool, and testing each end to end run with Cat-5 wire tester will insure that your system operate flawlessly, Fig. 1.

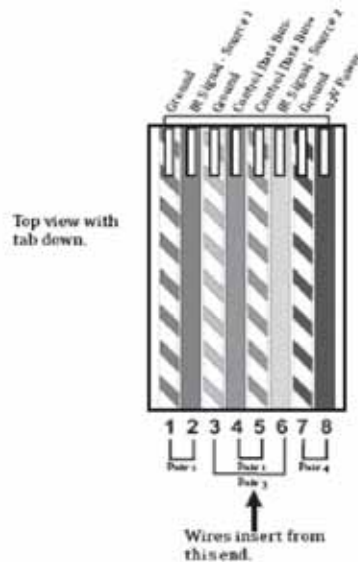



Fig.1: EIA 568A wiring scheme for Cat-5 Cable
Pin #

1. Green Stripe
2. Green
3. Orange Stripe
4. Blue
5. Blue Stripe
6. Orange
7. Brown Stripe
8. Brown

Note: Colors listed as "stripe" are a white wire with a colored stripe.

Step-by-Step Crimping instructions

- Step1 Strip a 2 to 3 inches portion of the insulation, exposing the 4 twisted pairs.
- Step2 Untwist the wires and fan them out individually. Arrange the wires into the correct color scheme as shown in Fig.1
- Step3 Flatten the wires in their correct order, and trim them evenly across the top. Most crimp tools have a wire trimmer built-in. It is best to trim the wires to about 1/2" in length.
- Step4 While holding the wires flat between your thumb and forefinger, insert the wires into the RJ45 connector, so each is its own slot. Push the wire into the RJ45, so all 8 conductors touch the end of the connector. The insulation jacket should extend beyond the crimp point of the RJ45.
- Step5 Insert the RJ45 into the crimp tool receptacle and squeeze the tool firmly. Note that a ratchet type tool should tighten down until it no longer clicks.
- Step6 The RJ45 should be firmly crimped to the Cat-5 insulation. It is necessary that the color scheme be repeated identically on each end of the wire.

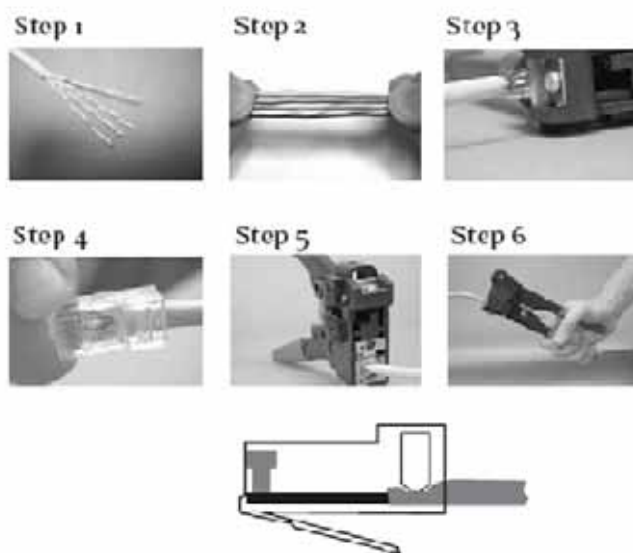


3. Speaker Wire Termination at XOI

It is important to keep the proper orientation of positive and negative signal for each speaker connection. Typically, two-conductor speaker wire uses red to denote positive and black to denote negative. Some types of wire indicate positive with dark line running through the insulation. Four-conductor wire can also be used. This has four separated wires in one outer jacket, making it possible to run a single speaker wire to a zone for its pair of speakers. This type of wire typically uses red and black for one speaker and white as positive and green as negative for the second speaker.

4. Installing the XOi

The XOi is designed to be placed on a shelf or in a component rack. If you are mounting the XOi with other components, you should remove the feet.

The audio sources are plugged into the four local source inputs on the back panel of the XOi using stereo RCA cables, Fig.4

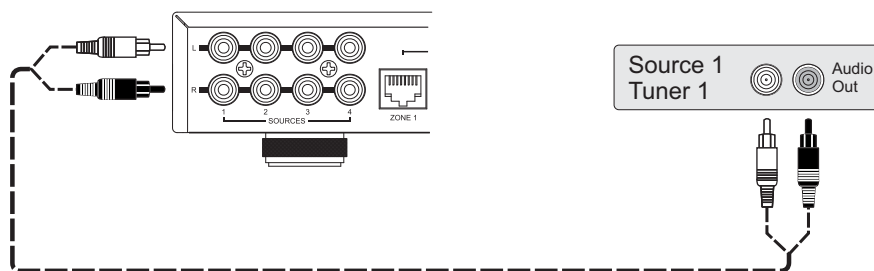

5. IR Outputs

The XOi system ships with four IRE1 IR Emitters for transferring IR data from the keypad receivers (located under the volume button) to the IR receiver on each piece of source equipment. There are two separated IR output sections on the back panel. The 38KHz outputs are used for most audio sources. The exception to this is cable and satellite boxes, which operate at a higher IR carrier frequency closer to 56KHz. It is important that the output being used for each source matches the source input number. The outputs work individually with each source to allow independent source control. Simply plug the IRE1 IR emitter into the appropriate IR output on the back of the XOi and attach the flasher end over the IR receiver of the source equipment, Fig. 5

The design of common IR distribution (no IR routing) to all sources is that each source must have different IR control code sets. For instance, if it is desired to have two or more DVD sources, they must be of different brands in order to have independent control.

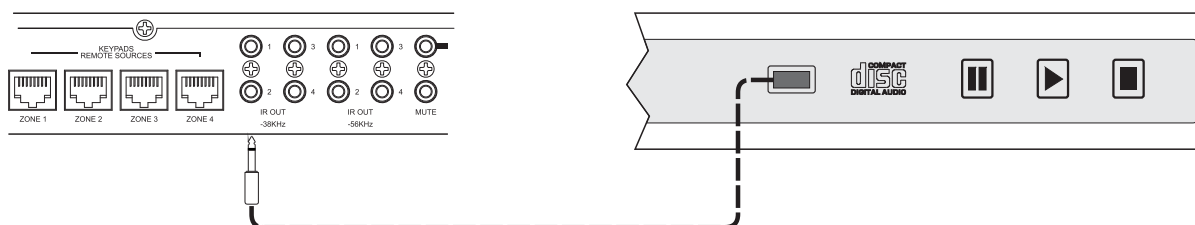


Fig. 5


6. Keypad XK1 and Zone Setup

The Zone number each keypad XK1 belonging to is decided by which RJ45 connector each keypad connected through Cat-5 cable from JK2 of XK1 to XOi.

7. EQ Control

The keypads can be used to set specific zone functions. These are for bass and treble EQ response and source grouping.

To change bass response, press Mute and Source 2 simultaneously and then release. Press Volume Up/Down keys for desired boost/cut as shown on volume LEDs, Fig.6. Likewise, changing treble response can be made in the same process, but it is accessed by pressing Mute and Source 3 together. Once the desired setting is achieved, press any sources key will release EQ adjust mode.

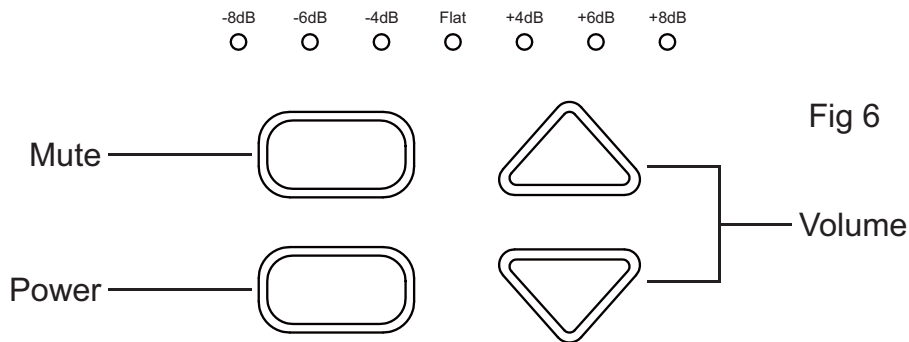

8. Source Grouping Mode Capability

Sourcing Grouping is a feature that allows multiple zones in an open living space to always share the same source selection but still retain individual volume control.

This mode forces all zones to same source and allows mute on/off and all zone off functions to operate all zones in unison.

To engage Source Grouping Mode, press and hold a desired Source button for >5 seconds and release button when all volume indications are turned on. Source button then turns Amber in color, indicating system is now in Source Grouping Mode. When the Source Grouping Mode is initiated, the volume in all zones is defaulted to -30dB.

To cancel Source Grouping Mode, press and hold a Source button from the initiating zone for >5 seconds and release button when all volume indicators are turned on. The source button will then turns Red in color.

The XOi system keypads automatically memorize the listening volume when all zones have been turned off and a zone is turned on again.


9. Using the Link Jack to create Eight Zones (This is an optional feature)

Two XOis can be made to react as one by using the back-panel 3.5mm connection labeled "Link". If a single mono mini-patch cable is plugged into the "Link" jack on both XOis, it links the All Off command to make all eight zones turn off when it is initiated at any of the zone keypads.

10. Mute Input and the AMC PDM1 (Phone-Doorbell-Mute Module)

(This is an optional feature)

The back panel of the XOi has a 3.5mm non-shorting stereo connector input labeled "Mute". This is designed to be used with the AMC PDM1 Phone-Doorbell-Mute module. When the PDM1 is connected, the system will temporarily mute when the phone or doorbell rings.

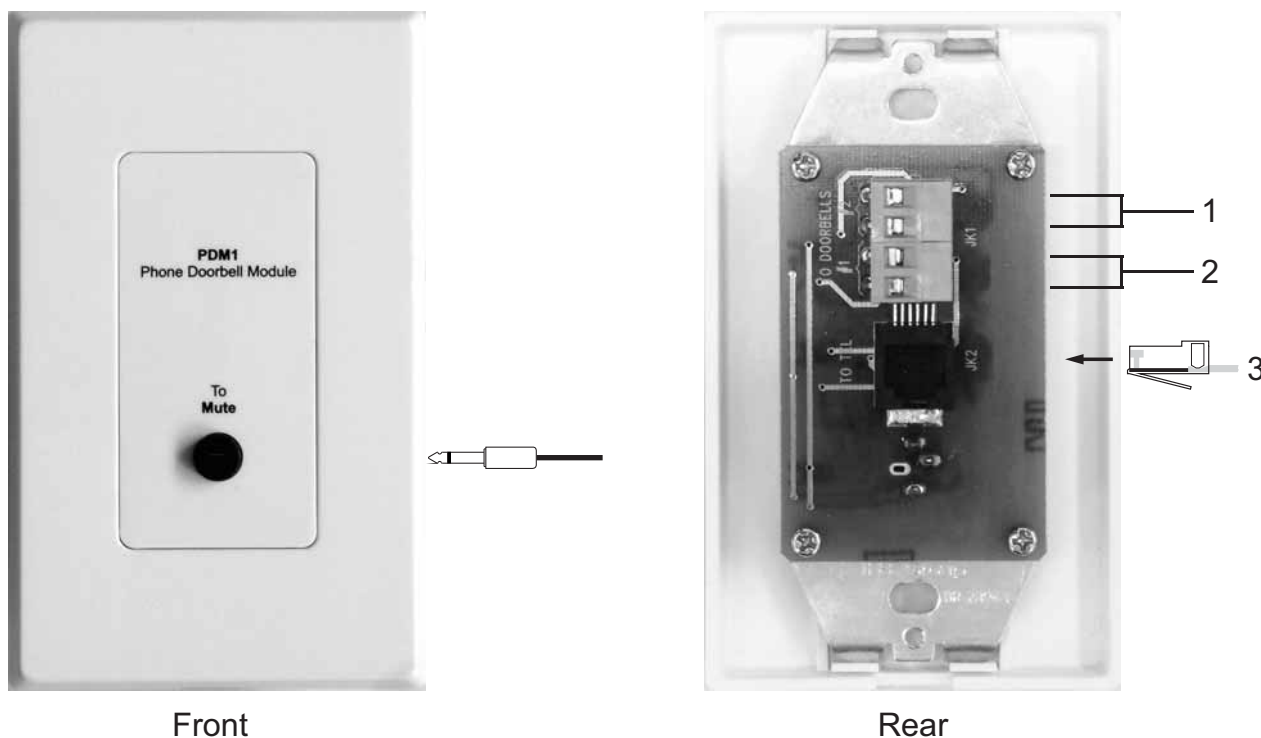

AMC PDM1 (Phone-Doorbell-Mute Module)

1,2 Doorbell (This is an optional feature)

The back of PDM1 will accept up to two AC or DC voltages from two different doorbell chimes.

This connection is done with two conductor wire from the terminals on the doorbell chime to the Doorbell A or Doorbell B inputs on the back of the PDM1, Polarity is not important for this connection.

3. RJ-11 Connection

Up to two phone lines can be brought into the RJ-11 connection on the back. The voltage from the phone ringer will trigger the XOi System to mute.

SPECIFICATIONS

Total Zones	4 Zones
Zone 1~4 with Speaker Outputs	15Wrms x 2
Sources	4 Local / 4 Remote Mixed Sources
Sensitivity	60mV
IR outputs frequencies	four 38KHz and four 56KHz
IR output level	5V p-p
Phone input sensitivity	AC25V~AC100V 20Hz
Doorbell input sensitivity	AC/DC 3~12V

PHYSICAL

Dimensions (W x H x D)	W 430.0mm x H 53.3mm x D 338.5mm
Net weight	5.0Kgs
Shipping weight (4 pieces)	34.0Kgs
Power consumption	120W

Weltronics Corp. reserved the right to improve its products at any time. Specifications are subject to change without notice.

AMC XO

8 Zone 8 Source Audio Digital Home System

XOi

4 Zone 4 Source Audio Digital Home System

X86

6 Zone 8 Source Audio / Video Digital Home System

Appendix I **RS232 Manual**

XO/XOi/X86 MANUAL - Appendix I

RS232 Manual

Table of Contents

1. Table of Contents	2
2. Serial port specification	3
• Serial Port Hardware.....	3
• Serial Port Communication Protocol	3
3. Command set specification	3
• Command Format.....	3
• COMMAND.....	3
• RETURN	3
• ERROR RETURN	3
4. Numbering Format and Range	4
• Zone Number Range	4
• Source Select Range.....	4
5. Standard Status Feedback Format	4
• Status Feedback Conditions	4
• Status Feedback Format	4
• Special Conditions	4
6. Command Reference	5
• Zone Status.....	5
• Tone Control Settings	5
• Power OFF.....	5
• Power ON.....	5
• Power Toggle	6
• All Zones OFF	6
• Un-mute all Zones.....	6
• Mute all Zones	7
• Source Select	7
• Adjust Volume	7
• Volume Up 1dB	7
• Volume Down 1dB	8
• Zone Mute OFF	8
• Zone Mute ON	8
• Adjust Bass	8
• Adjust Treble	9
• Group Mode OFF	9
• Group Mode ON	9

Serial port specification

Serial Port Hardware

- Standard DB9 RS232 connector

Serial Port Communication Protocol

- RS232 asynchronous serial communication
- 38400 bps, 8 bits, 1 stop bit, no parity
- no flow control

Command set specification

Command Format

- All commands are in ASCII characters
- All commands begin with "*" (asterisk) character and end with <CR> character (0D hexadecimal)
- All commands RETURN with some feedback begin with "*" (asterisk) character and end with <CR> character (0D hexadecimal)
- If a command produces an error or structured with incorrect syntax, the system will return with "?<CR>" characters
- Multiple commands require a delay of 500ms between commands

COMMAND



RETURN



ERROR RETURN



Numbering Format and Range

Zone Number Range

- XO: 01-08
- XO_i: 01-04
- X86: 01-06

Source Select Range

- XO: 01-08
- XO_i: 01-04
- X86: 01-08

Standard Status Feedback Format

Status Feedback Conditions

- Most commands send to the system will receive this type of Status Feedback unless specified explicitly
- Upon any keypad and IR action, there will be some automatic feedback from the system:
 - Keypad: Upon any key presses from keypads in any zones, the unit will send updated status feedbacks via RS232 port.
 - IR: Upon any IR commands received from any IR receivers, the unit will send updated status feedbacks via RS232 port.

Status Feedback Format

RETURN	ZNaa, SRCbb, GRPc, VOL-dd
RETURN PARAMETERS	aa = Zone Number bb = Source Select c = 0 (Group Mode Off), 1 (Group Mode On) dd = dBs of attenuation (00 – 62 where 62=mute)

Special Conditions

- When a user press and hold the Power Button on any of the keypads to turn off ALL zones, there will be TWO RS232 responses:
 - The first response is the normal Status Feedback response:
ZNaa, SRCbb, GRPc, VOL-dd
 - The second response is the ALL ZONES OFF response:
ZALLOFF

Command Reference

Zone Status

ACTION	Zone Status Command returns status information on the given zone
COMMAND	ZnnSTA00
COMMAND PARAMETERS	nn = Zone Number
RETURN	Standard Status Feedback Format
RETURN PARAMETERS	

Tone Control Settings

ACTION	Return tone control settings on the given zone
COMMAND	ZNnnSET00
COMMAND PARAMETERS	nn = Zone Number
RETURN	ZNaa,BASSbb,TREBbb,GRPc
RETURN PARAMETERS	aa = Zone Number bb = EQ level +/- 8,6,4,0 c = 0 (Group Mode Off), 1 (Group Mode On)

Power OFF

ACTION	Power OFF the given zone (turn off ALL zones in group mode and leave group mode)
COMMAND	ZNnnPWR00
COMMAND PARAMETERS	nn = Zone Number
RETURN	Standard Status Feedback Format
RETURN PARAMETERS	

Power ON

ACTION	Power ON the given zone (restore last select source and volume level)
--------	---

COMMAND	ZNnnPWR01
COMMAND PARAMETERS	nn = Zone Number
RETURN	Standard Status Feedback Format
RETURN PARAMETERS	

Power Toggle

ACTION	Toggle between power On/Off for the given zone
COMMAND	ZNnnPWR02
COMMAND PARAMETERS	nn = Zone Number
RETURN	Standard Status Feedback Format
RETURN PARAMETERS	

All Zones OFF

ACTION	Turn off ALL Zones
COMMAND	ZALLPWR00
COMMAND PARAMETERS	
RETURN	ZALLOFF
RETURN PARAMETERS	

Un-mute all Zones

ACTION	Disable mute for ALL Zones
COMMAND	ZALLMUT00
COMMAND PARAMETERS	
RETURN	ZALLMOFF
RETURN PARAMETERS	

Mute all Zones

ACTION	Apply mute for ALL Zones
COMMAND	ZALLMUT01
COMMAND PARAMETERS	
RETURN	ZALLMON
RETURN PARAMETERS	

Source Select

ACTION	Change a input source for the given zone
COMMAND	ZNnnSRCss
COMMAND PARAMETERS	nn = Zone Number ss = Input Source
RETURN	Standard Status Feedback Format
RETURN PARAMETERS	

Adjust Volume

ACTION	Adjust volume for the given zone
COMMAND	ZNnnVOLvv
COMMAND PARAMETERS	nn = Zone Number vv = Volume Level (00 - 62 where 62=mute)
RETURN	Standard Status Feedback Format
RETURN PARAMETERS	

Volume Up 1dB

ACTION	Step volume up 1dB for given zone
COMMAND	ZNnnVOLUP
COMMAND PARAMETERS	nn = Zone Number
RETURN	Standard Status Feedback Format
RETURN PARAMETERS	

Volume Down 1dB

ACTION	Step volume down 1dB for given zone
COMMAND	ZNnnVOLDN
COMMAND PARAMETERS	nn = Zone Number
RETURN	Standard Status Feedback Format
RETURN PARAMETERS	

Zone Mute OFF

ACTION	Disable mute for the given zone with last volume preserved
COMMAND	ZNnnMUT00
COMMAND PARAMETERS	nn = Zone Number
RETURN	Standard Status Feedback Format
RETURN PARAMETERS	

Zone Mute ON

ACTION	Apply mute for the given zone and memorize the current volume
COMMAND	ZNnnMUT01
COMMAND PARAMETERS	nn = Zone Number
RETURN	Standard Status Feedback Format
RETURN PARAMETERS	

Adjust Bass

ACTION	Adjust Bass by +/- 0,4,6,8 dB
COMMAND	ZNnnBASsn
COMMAND PARAMETERS	nn = Zone Number s = + or - sign n = Bass Adjustment Level (0,4,6,8)

RETURN	ZNaa,BASSbb,TREBbb,GRPc
RETURN PARAMETERS	aa = Zone Number bb = EQ level +/- 8,6,4,0 c = 0 (Group Mode Off), 1 (Group Mode On)

Adjust Treble

ACTION	Adjust Treble by +/- 0,4,6,8 dB
COMMAND	ZNnnTRBsn
COMMAND PARAMETERS	nn = Zone Number s = + or - sign n = Treble Adjustment Level (0,4,6,8)
RETURN	ZNaa,BASSbb,TREBbb,GRPc
RETURN PARAMETERS	aa = Zone Number bb = EQ level +/- 8,6,4,0 c = 0 (Group Mode Off), 1 (Group Mode On)

Group Mode OFF

ACTION	Disable Group Mode
COMMAND	ZALLGRP00
COMMAND PARAMETERS	
RETURN	GRPOFF
RETURN PARAMETERS	

Group Mode ON

ACTION	Activate Group Mode
COMMAND	ZALLGRPss
COMMAND PARAMETERS	ss = Input Source for this group (01 - 04/08)
RETURN	GRPON,STC _{ss}
RETURN PARAMETERS	ss = Input Source selected for this group

SAFETY INSTRUCTION

1. READ INSTRUCTIONS

All the safety and operating instructions should be read before the appliance is operated.

2. RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

3. HEED WARNINGS

All warnings on the appliance and in the operating instructions should be adhered to.

4. FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

5. WATER AND MOISTURE

The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.

6. CARTS AND STANDS

The appliance should be used only with a cart or stand that is recommended by the manufacturer.

6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



7. WALL OR CEILING MOUNTING

This equipment is not designed for use mounted on a wall or a ceiling.

8. VENTILATION

The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or placed in a built-in installation, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.

9. HEAT

The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

10. POWER SOURCES

The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

11. POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

12. CLEANING

The appliance should be cleaned only as recommended by the manufacturer.

13. NON USE PERIODS

The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

14. OBJECT AND LIQUID ENTRY

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

15. SERVICING

The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

16. DAMAGE REQUIRING SERVICE

The appliance should be serviced by qualified service personnel when:

- The power-supply cord or the plug has been damaged; or
- Objects have fallen, or liquid has been spilled into the appliance; or
- The appliance has been exposed to rain; or
- The appliance does not appear to operate normally or exhibits a marked change in performance; or
- The appliance has been dropped, or the enclosure is damaged.

17. POWER LINES

(APPLIES TO TUNER AND RECEIVERS ONLY)

An outdoor antenna should be located away from power lines.

18. OUTDOOR ANTENNA GROUNDING


(APPLIES TO TUNER AND RECEIVERS ONLY)

If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure.

- Use No. 10 AWG (5.3 mm²) copper, No. 8 AWG (8.4 mm²) aluminum, No. 17 AWG (1.0 mm²) copper-clad steel or bronze wire, or larger, as a ground wire.
- Secure antenna lead-in and ground wires to house with stand-off insulators spaced from 4-6 feet (1.22-1.83 m) apart.
- Mount antenna discharge unit as close as possible to where lead-in enters house.
- Use jumper wire not smaller than No. 6 AWG (13.3 mm²) copper, or the equivalent, when a separate antenna-grounding electrode is used. See NEC Section 810-21(j).

Antenna Grounding According to the National Electrical Code

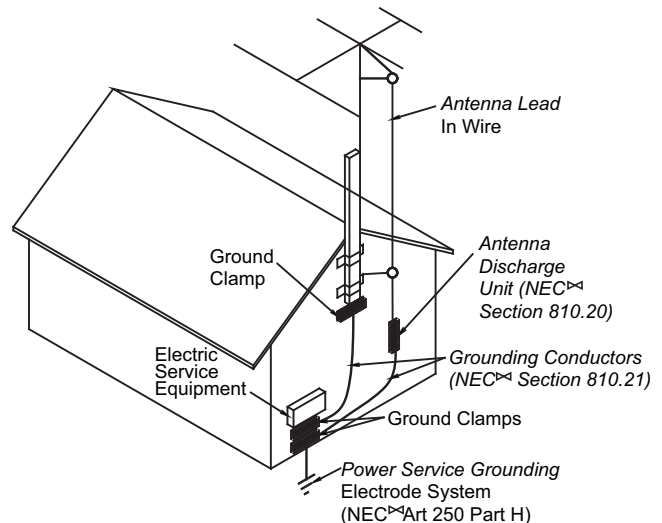

† National Electrical Code
Available from Library, book stores, or National Fire Protection Association (Batterymarch Park, Quincy, MA 02269).



21R-4213-1



WELTRONICS CORP.

LONDON/L.A.

AMC Web: <http://www.amchome.com>

PN: 21R-4213-1